



the Gunn House MEDIA ROOM



(1) Dennon Receiver

This is the main hub. ALL audio & video go through this device. Use remote (1) to control volume & input/output. Press Red Power button at top right to turn on.

(2) Direct TV Satellite Box

Use remote (2) to turn on Box & TV [top right button]. Use Receiver remote (1) for input & volume; set to "SAT/CBL". Press "Guide" on remote (2) to browse channels. Music channels are 804-857.

(3) Sony Blu-ray & DVD player

To watch a Blu-ray or DVD movie, insert your disk into unit. Use remote (3) for movie controls; menus, pause, zooming, etc. Use Receiver remote (1) for input & volume; set to "BD".

(4) 5-Disk CD Player

Load up-to 5 CDs for hours of music. Use remote (1) to set receiver to "CD". This remote also controls the CD player; pause, next track, etc.

(5) iPod Dock

This plugs directly into, & can be controlled by, the receiver (1). You can also use the UBS port on the front.



(6) Whole-House Speaker Control

To hear music throughout the house (living room, kitchen, & out-side areas), first turn on the receiver (1), & press "ZONE2 On/Off" (A). Then use "ZONE2 Select" (B) to choose what you want to hear. You can have different audio playing in the media room ["Source Select" knob (C)] & the rest of the house ["ZONE2"]. Use the small rectangle buttons on box (6) to turn the speakers in each room on or off. Receiver (1) does not control volume, use the round knobs on box (6) to adjust the volume per room. No remote for box (6).

(6b) This is the amplifier that powers box (6). It turns on & off automatically. You do not need to touch this box at any time.

NOTE: There is no remote for the TV. Use remote (1) or (2) to power on TV. The volume & input is controlled by the Receiver (1). Channels are controlled by (2).

Cupboard doors must be open for remote to work.